


OPERATION INSTRUCTION

Indoor Monitor User Manual









Only for :
- 85429 FHD/CVBS
- 85717 FHD/CVBS
- 85729E FHD/CVBS

Packing list

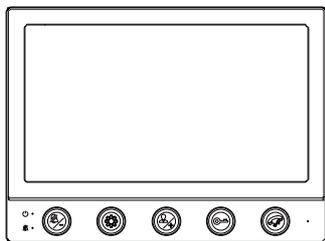


OR
или же

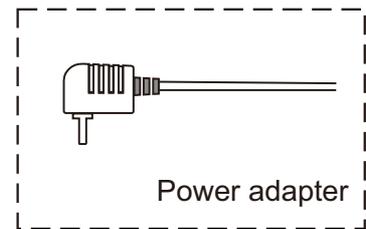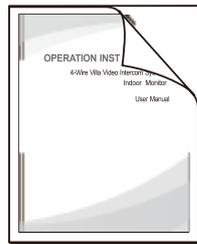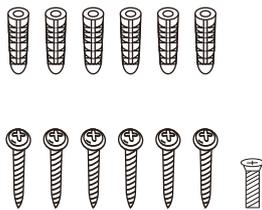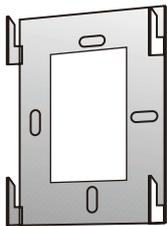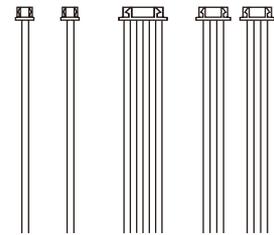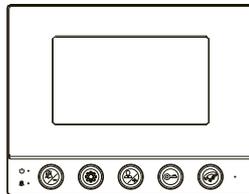


❗ If the indoor monitor with built-in power supply, the DC power adapter will not be included.

Monitor Appearance Introduction

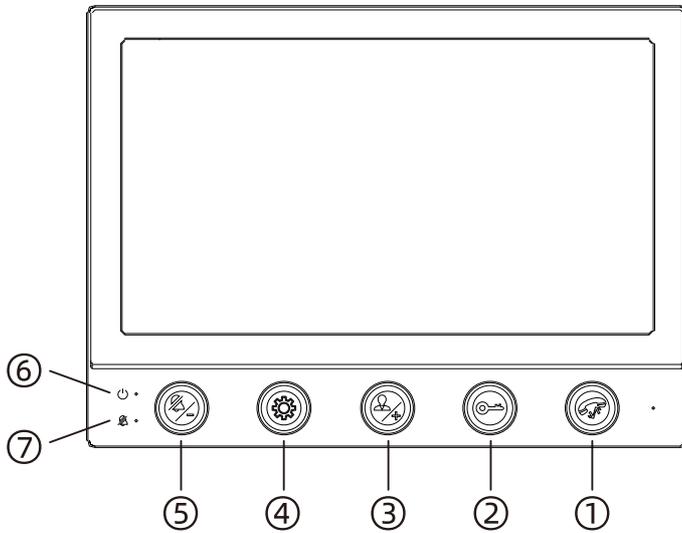


The 7" Inch indoor unit' front panel

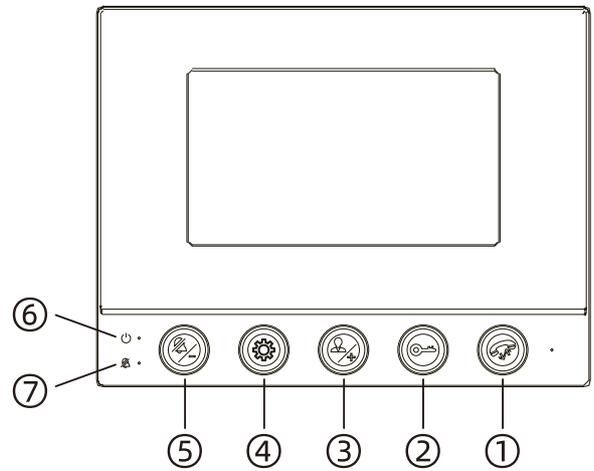

The 4.3" Inch indoor unit' front panel

No.	Name	Description
①	Answer	Answer the calling from outdoor unit/To call another indoor monitor/Hang up/Long press to exit
②	Unlock	Unlock the door of the outdoor station when Monitoring or calling
③	Monitor	Monitor outdoor unit/Monitor CCTV Camera/Scroll up the menu
④	Setting	Click this key to enter menu in any mode
⑤	Setting/Mute	Turn on/off the Do Not Disturb mode/Scroll down the menu
⑥	Power Indicator	The indicator light will always on when power on
⑦	Mute Indicator	Lights up when Do Not Disturb mode is turned on

Outdoor unit Appearance Introduction

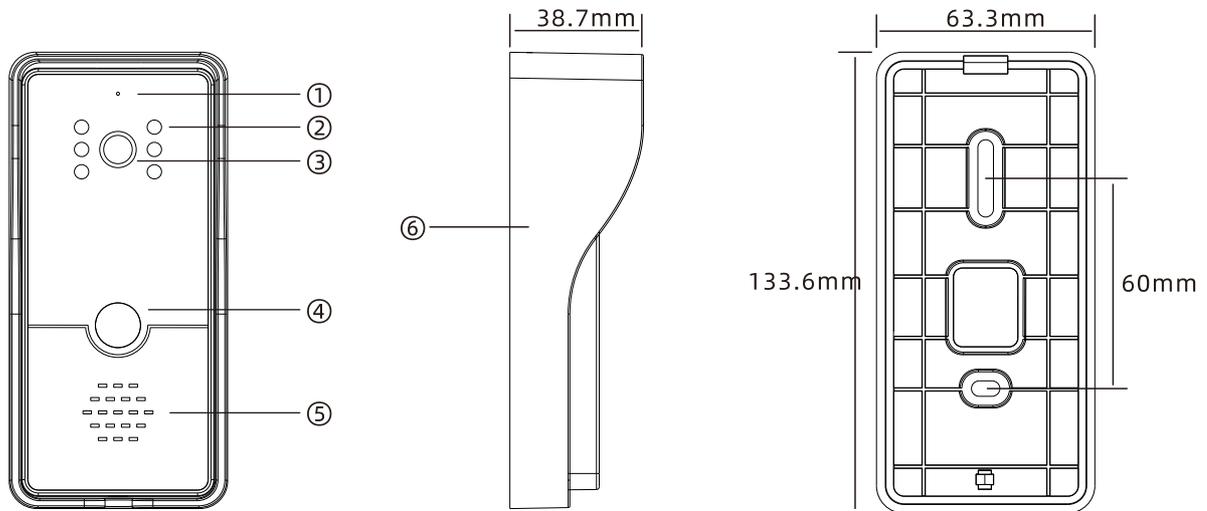

①	Microphone	②	Infrared light
③	Camera	④	Call button
⑤	Speaker	⑥	Rain cover

Installation Note

▲ The unlocking signal output by the outdoor unit is a switch quantity (normally open or normally closed)

▲ The output voltage of the camera's interface is DC15V, and the maximum current is 500mA; Please confirm the camera parameters before use

▲ The effect of intercom sound quality and video display has a great relationship with the wiring cable and wiring distance used (It is better to use shielded cable)


▲ 4C cable routing distance requirements

Wiring distance $\leq 20\text{m}$ Use cables with a wire diameter of $4 \times 0.3\text{ mm}$ or more

Wiring distance $\leq 50\text{m}$ Use cables with a wire diameter of $4 \times 0.5\text{ mm}$ or more


Wiring distance $\leq 80\text{m}$ Use cables with a wire diameter of $4 \times 0.75\text{ mm}$ or more

▲ 4C ordinary unshielded and shielded wire connection mode

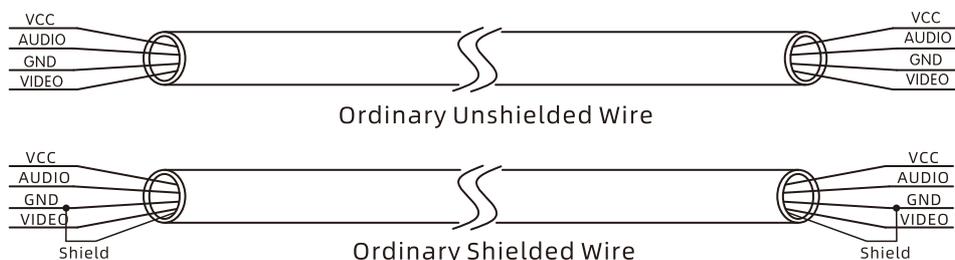

▲ Please disconnect the power adapter before connecting the device

Wiring Diagram

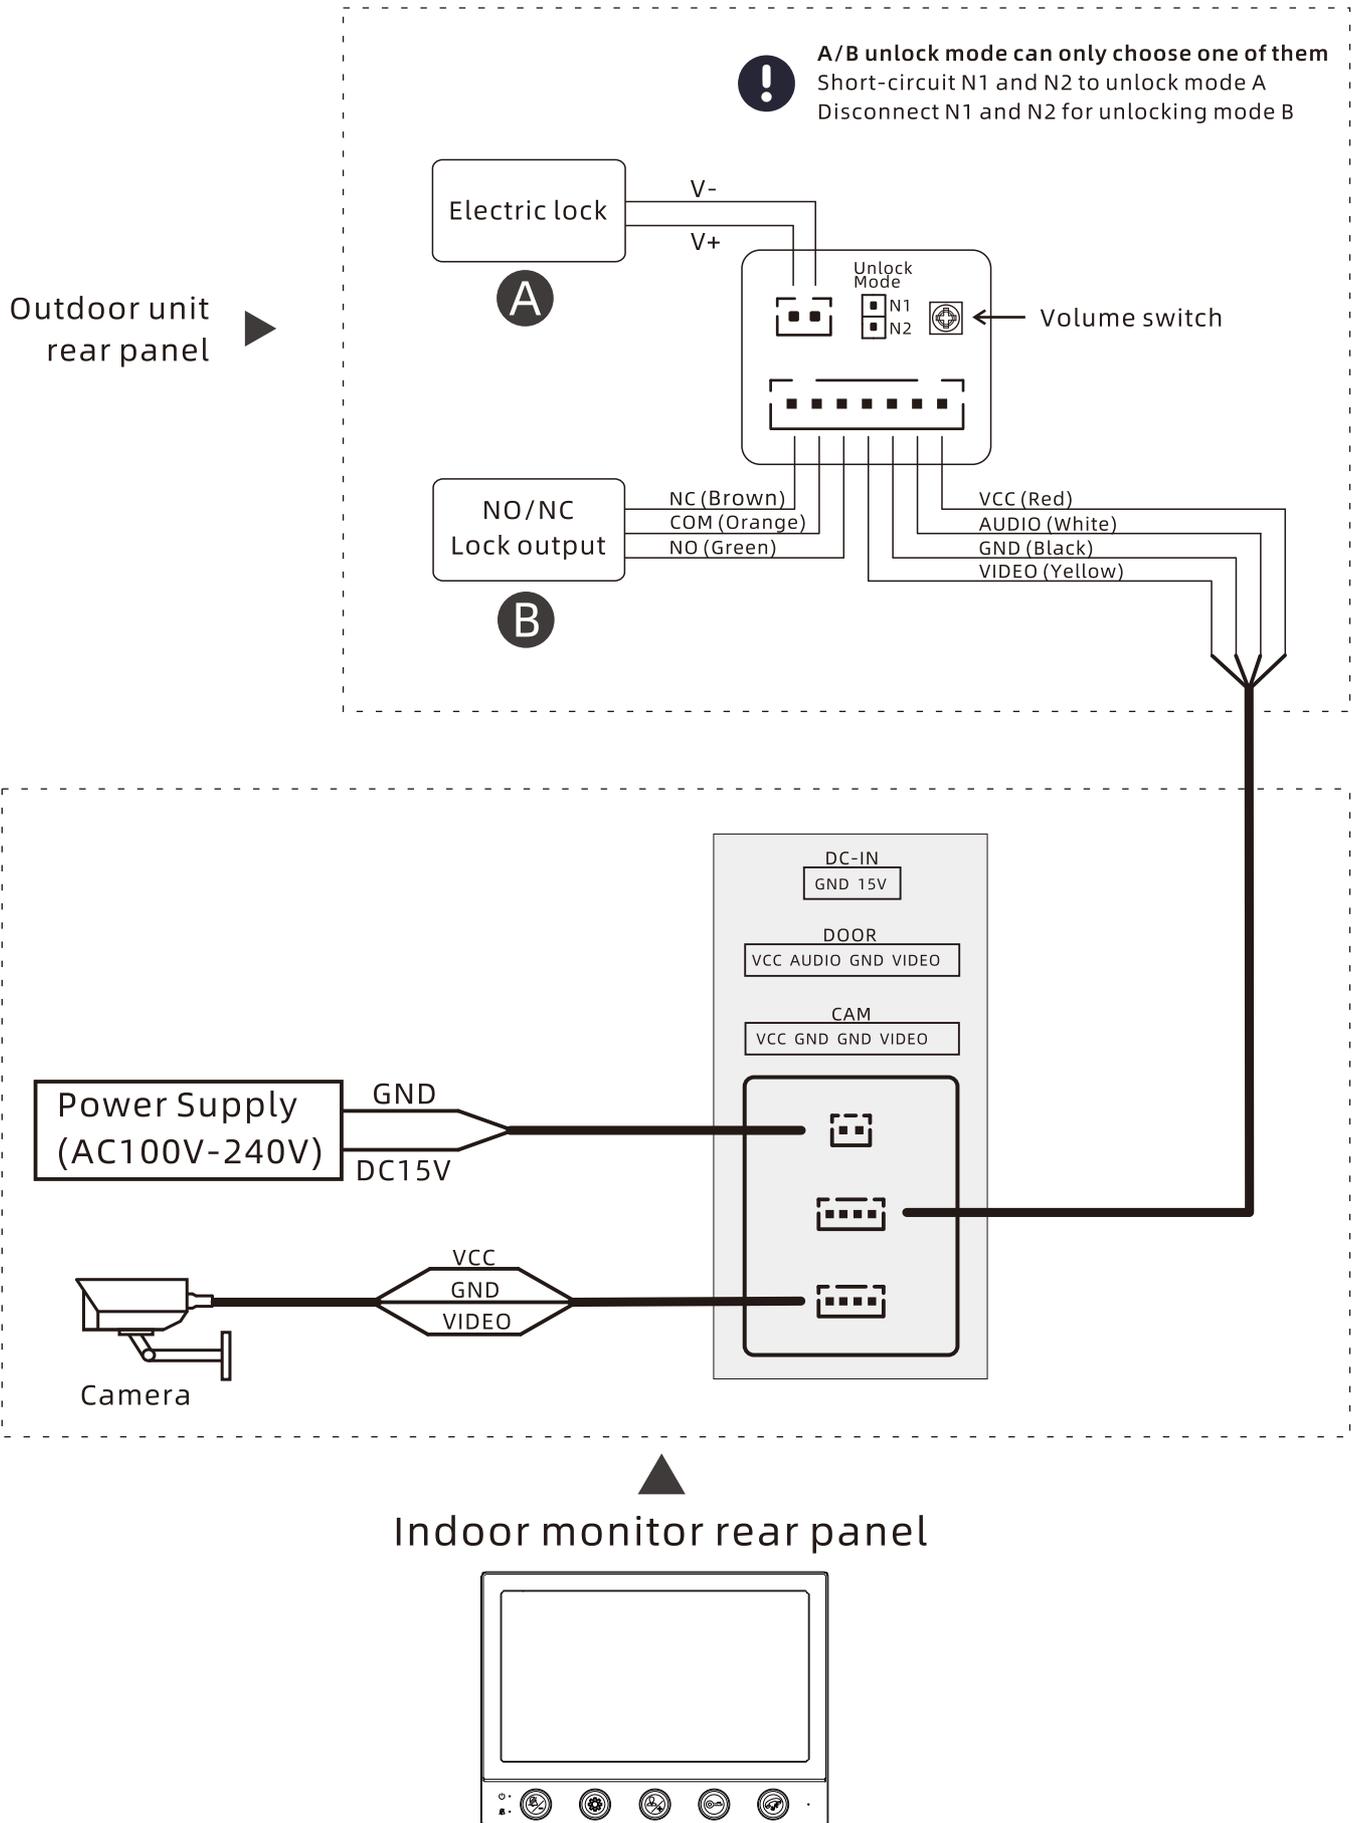

Operation Instruction

● Call

When clicking the calling button of door station, indoor monitor and door station will ring together, indoor monitor will show image of door station. It will last for 60s

● Answer the intercom

When a visitor calls, press the Intercom key " " to answer; Press again " " to exit .Video intercom time can last for 120s.

● Monitoring

When the indoor unit is in standby, press the Monitor key " " to monitor the outdoor station, and press it again to switch to monitoring CCTV; When monitoring the outdoor station, it can intercom with outdoor station by pressing the intercom button " " .

● Unlock

Press the unlock button " " to unlock the door when intercoming with the visitor; When the door station is under monitoring ,It can also unlock the door by pressing the unlock button " " .

● Settings Menu


When turning on the indoor unit , pressing the Setting key " " to display the setting menu to adjust the Brightness  , Contrast  , Ringtone Volume  , Ringtone  and Intercom Volume  .Press the Setting key " " each times to switch the above setting items, select the item you want to set and press the Up key " " or Down key " " to adjust the parameters

● Mute Mode


Select Mute Mode  in the settings menu, press the Up key " " or the Down key " " to turn it off or on Mute Mode;  means turn off Mute Mode,  means open Mute Mode; Mute Mode When turned on, a prompt icon  will appear on the screen. The setting key with mute mode, Long press it for 3s to enable or disable the mutemode.

Indoor Monitor Installation

- ▲ Avoid installation of the device near strong radiation e.g AC motor and lift
- ▲ Do not disassemble privately to avoid damage to the device. Maintenance should be complied with qualified technician
- ▲ Avoid hard shake , beating and collision , otherwise the internal exact components maybe be damaged.
- ▲ The best installation height: 150cm-160cm is recommended
- ▲ Switch off power supply before installation.
- ▲ Keep it away from the water and magnetic field

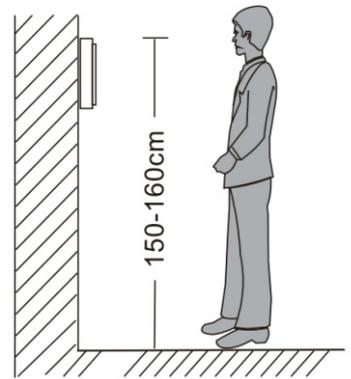

● Installation Diagram

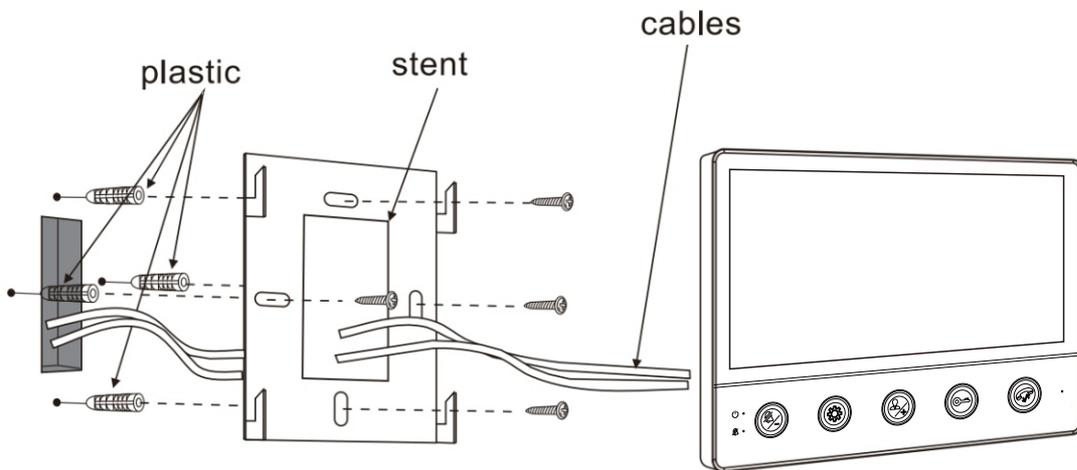


Indoor Monitor Specification


Screen Size	7 / 4.3 Inch LCD
Resolution	7" 1024X600/800X480, 4.3" 480X272
Video Format	PAL/NTSC
Call Mode	Automatic half duplex
Intercom Time	60s
Working Voltage	15V
Stand-by Current	Max 60mA
Working Current	Max 550mA
Working Temperature	-10~50°C
Installation Method	Surface mount

Outdoor Unit Installation

● Installation method

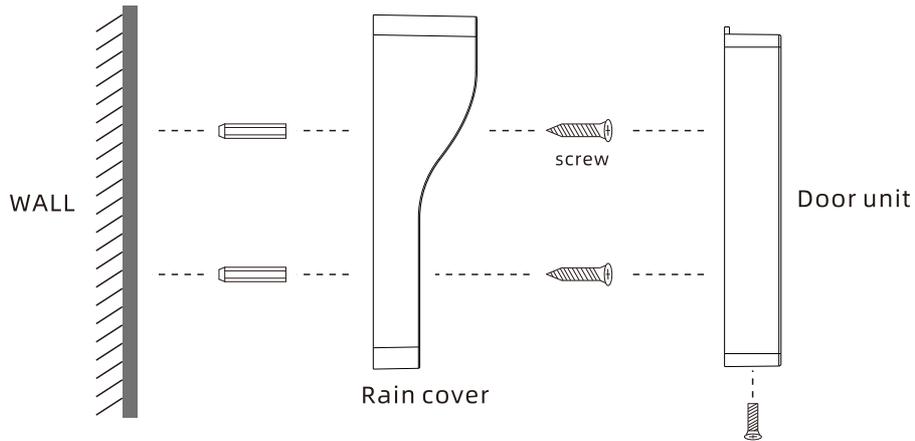

● Installation location reference

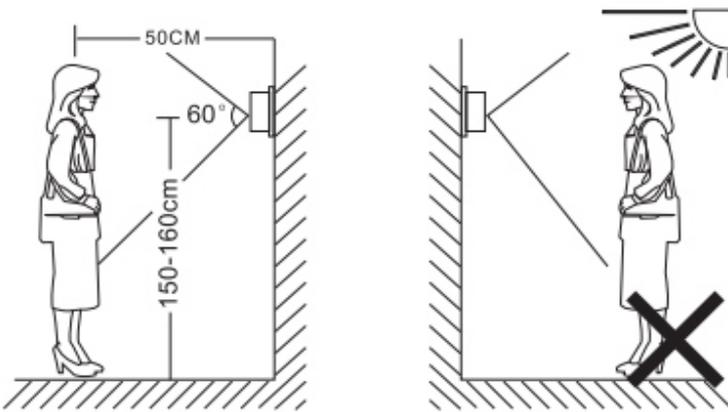

- ▲ Do not expose the door host to strong light or sunlight.
- ▲ The best installation height of the door host is at the user's eye level.

Outdoor Unit Specication

Camera Sensor	1/4、1/3、1/2" CMOS
View Angle	60°~ 120°
Camera Resolution	800TVL/1200TVL/960P/1080P
LED	Infrared light
Working Current	≤150mA
Operating Voltage	DC15V (powered by indoor monitor)
Working Temperature	-20~50°C

