

Science & Technology protect your comfort life.

OPIZ

User manual

OPIZ




www.opizcn.com

OPIZ ELECTRONICS CO.,LTD

OP -D3D21R

1.VIEW


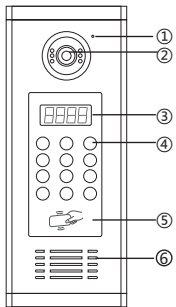


1. MIC
2. Camera
3. Display screen
4. Keypad
5. Card reader
6. Speaker

2.SPECIFICATIONS



input	DC 12V
screen	numeric display
wire type	Rj45
temperature	-20℃~+50℃
dimension	320*130*50
installation size	302*107*30.4

3.PORTS

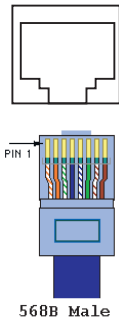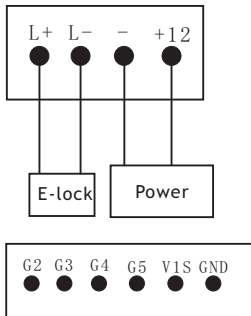

- PIN1 : white&orange
 PIN2 : orange
 PIN3 : white&green
 PIN4 : blue
 PIN5 : white&blune
 PIN6 : green
 PIN7 : white&brown
 PIN8 : brown

- G2:audio input
 G3:GND
 G4:net-work audio output
 G5:communication data
 V1S:video
 GND:GND

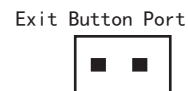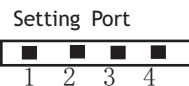

4.FUNCTIONS

- ◇ Only need one net cable
- ◇ Work with manager center
- ◇ Card reader
- ◇ Alarm

5.SETTING

Main functions and operation.

- 1.Call:input 4 room numbers to call related room,press "# "to delete and re-input.
- 2.Call manager center:press "0000" to call manager center.
- 3.Unlock by password:press "*", "1" will display "COdE",then input password to unlock.

Modifying new password:

Press "*", "0" will display "SUPE" and then input "0000+ old password" will display "P - - -",input room number+new password. If success will hear a long "bi" and showing "good".

If miss the password,press "*" "0" display "SUPE" then input room number+ manager password 8888,will display "P - - -",input new password.

6.Other Setting

1.Setting up building number:Open the back box,put jumper in "1" & "2" pin,press"#", will display "BUId",input four number,like building 123, should put in 0123,as success will show "good".Put down jumper and then input "#" for confirm.

2.Setting manager password:Open the back box,put jumpers in "1"&"2", "3"&"4", press "#", "SSPE" will display,then input the manager password you want,will display "good", put down jumper and input "#" for confirm.(original manager password:8888).

3.Setting up capacity units:Open the back box,put jumper in "3"&"4", press "#", "----" will display,input four number (the first and second are floor capability, third and forth are unit/floor) will show "good",input "#" for confirm.
 Original capability:1208