
5. PROGRAMMING

OPIZ



User Manual 7 inch color monitor

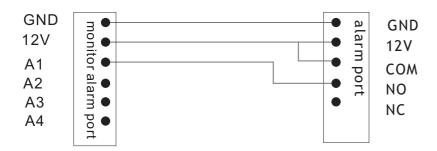


www. opizcn. com
OPIZ ELECTRONICS CO,.LTD.






1.VIEW

1.Front view

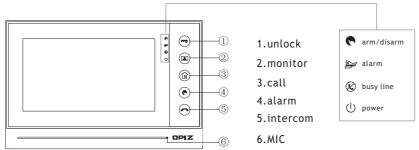


 2. Side view



- 1.adjust color
- 2. adjust ringtone volume
- 3.adjust intercom volume

3.back view

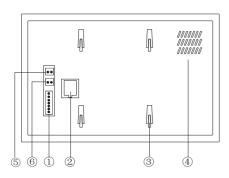

- 1.alarm port
- 2.net port
- 3.install hole
- 4.speaker
- 5. for factory testing
- 6.setting up room number(BM)

2.FUNCTIONS

1. two way communication

2.adjust intercom volume

3.remote unlock

4. auto shut down

5.monitoring

6.adjust color and brightness

3. OPERATION

1.Intercom:press "intercom" button to communicate with the visitor when the indoor monitor is ringing.

2. Unlock: press "unlock" button to release the door in talking or monitoring states.

3. Monitor: press "monitor" button to view the outside in standby states.

4. Call manager center: press" call" button to call manager center and talk with it.

5. Arming: press "arm" button for 3 seconds in disarming states, delay time 30 seconds, IR and maganetic door is arming when hear "DDD" from monitor, arm singal will be sent to manager center during delay time, press "ringtone" button to disarm.

6. Disarming: press "disarm" button in arm state.

7. Emergency alarm: connect an emergency button, it will alarm once you press it.

8. Gas alarm: it will alarm once it received signals.

9. Alarm light will flash at speed of 1 time/second.

10. Setting up room number;

Use short-circuiter to connect the "BM", which is at the back side of monitor, input 4 room numbers, then you will hear"D"from monitor. Finally, disconnect the shorcircuiter and room number is set successfully.

4.SPECIFICATIONS

relative humidity:45%—95%

atmospheric pressure:86—108Kpa

fire endurance rating:IP33 working voltage:DC16-30V

standby current:20mA

working current: 380mA

screen size:7 inch

dimension:230*150*30mm installation:wall mounted

N.W.:400g