

IV. SPECIFICATIONS

Parameters

Operating ambient temperature : -10°C~55°C

Working Humidity: 45%~95%

Atmospheric pressure: 86Kpa~108Kpa

Flammability rating of housing material: IP33

Working voltage: DC 12V

Static current: 0.2A

Working current: 0.5A

Size:360*215*75mm

Net weight: 1.2KG


Installation ways: Hung with the pothook or placed on the desk.

User Manual Manage Center




D3M2


I. VIEW

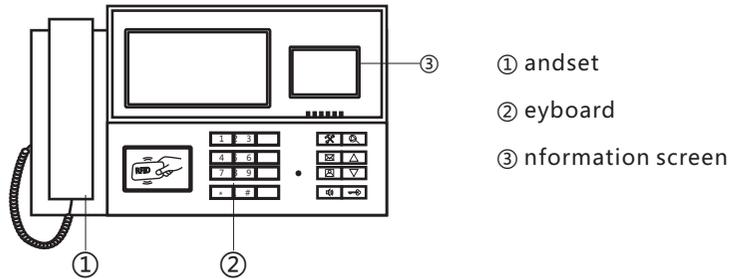

- 1.*: Press this button to make manager center back to standby state.
- 2.#: Press this button to dial the latest No. you call or the latest No. you received.
3. ⚙️ 🔍 :Set time and date
4. 🗣️ :Monitor outdoor station
5. 🔑 :Unlock outdoor station or fence station

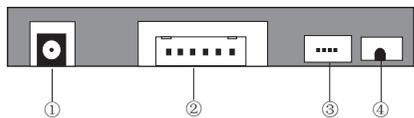


- ① power input
- ② Communication interface
- ③ setting interface
- ④ indicator

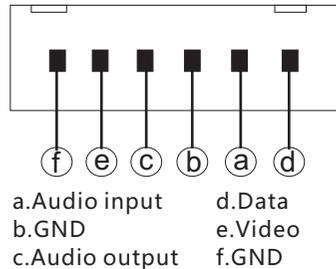

II. FUNCTIONS

- 1.The manager center can call any indoor monitor in one system
- 2.Building of any structure is supported.
- 3.Unlock
- 4.Supports up to 999 pieces of outdoor stations

III. Operations

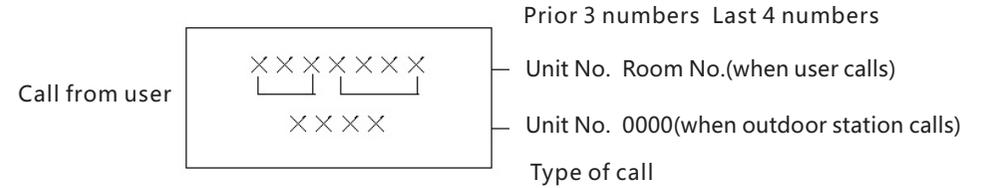

1. Monitor outdoor station

Input the unit No. of the outdoor station you need to monitor at keyboard,then press "🗣️" and the image screen turns on showing the scene of outdoor station.

2. Unlock outdoor station or fence station

Input the unit No. of the outdoor station or fence station you need to unlock at keyboard,then press "🔑".

3. Called by indoor monitor

When called by indoor monitor,there is a beep,and the No. of the unit and room where the calling indoor monitor are is showed on information screen.Press any button except for "*" to stop the beep.Press "#" or input the unit No. and room No. of the calling indoor monitor to call the indoor monitor back and two way talk is possible if the indoor monitor answers the call.

4. Called by outdoor station or fence station

When called by outdoor station or fence station,there is a beep,and the unit No.of the calling outdoor station or fence station and "0000" are showed on information screen and the scene of the calling outdoor station or fence station is showed on image screen.Press any button except for "*" to stop the beep and the two way talk with the calling outdoor station or fence station is possible .After confirming the visitor,press "🔑" to unlock the outdoor station or fence station.

5. Time and date setting

Time setting:

Press "⚙️" or "🔍" and operate according to the menu (24-hour format).For example:if you want to set as 8:10,please input "0810".

Date setting:

Press "⚙️" or "🔍" twice and operate according to the menu.For example:if you want to set as 2005-10-01 Wednesday ,please input "0510013".if you want to set as 2005-01-01 Sunday,please input "0501010".